



# FOREVER REDWOOD

*From the Forest, For the Forest since 1995*








866.332.2403 (TOLL FREE); 7am – 7pm Pacific Time, Monday-Saturday

## ASSEMBLY INSTRUCTIONS FOR THE **THE GARAGE ARBOR KITS**















**CONTENT OF BOXES**

Qty.	Description	Drawing	No.
2	Posts		1
2	Support		2
2	Brace		3
2	Rafter		4
Will vary.	Central Supports		5
Will vary.	Slats		6
2	Boots		7

*Note: Part numbers in the Content of Boxes Table are for reference only. These do not match to the numbers marked on the parts sent.*




### HARDWARE LIST

Description	Drawing	No.
1/2" X 3 1/2" Anchor Bolts (To attach the anchor bases to the ground).		A
5/16" X 3" Lag Bolts (To attach the posts to the anchor bases).		B
5/16" X 5 1/2" Bolts (To attach the supports to the posts).		C
3/8" X 8" Bolts (To attach the braces to the posts).		D
3/8" X 8" Lag Bolts (To attach the supports to the braces).		E
3" Deck Screws (To attach the rafters to the supports. / To attach the slats to the rafters. / To attach the boots to the posts).		F
5/16" X 4" Bolts (To attach the central support to the Rafter).		G
Washers		H
5/16" Nuts		I
3/8" Nuts		J

*Note: Dimensions of your hardware will vary depending on size.*



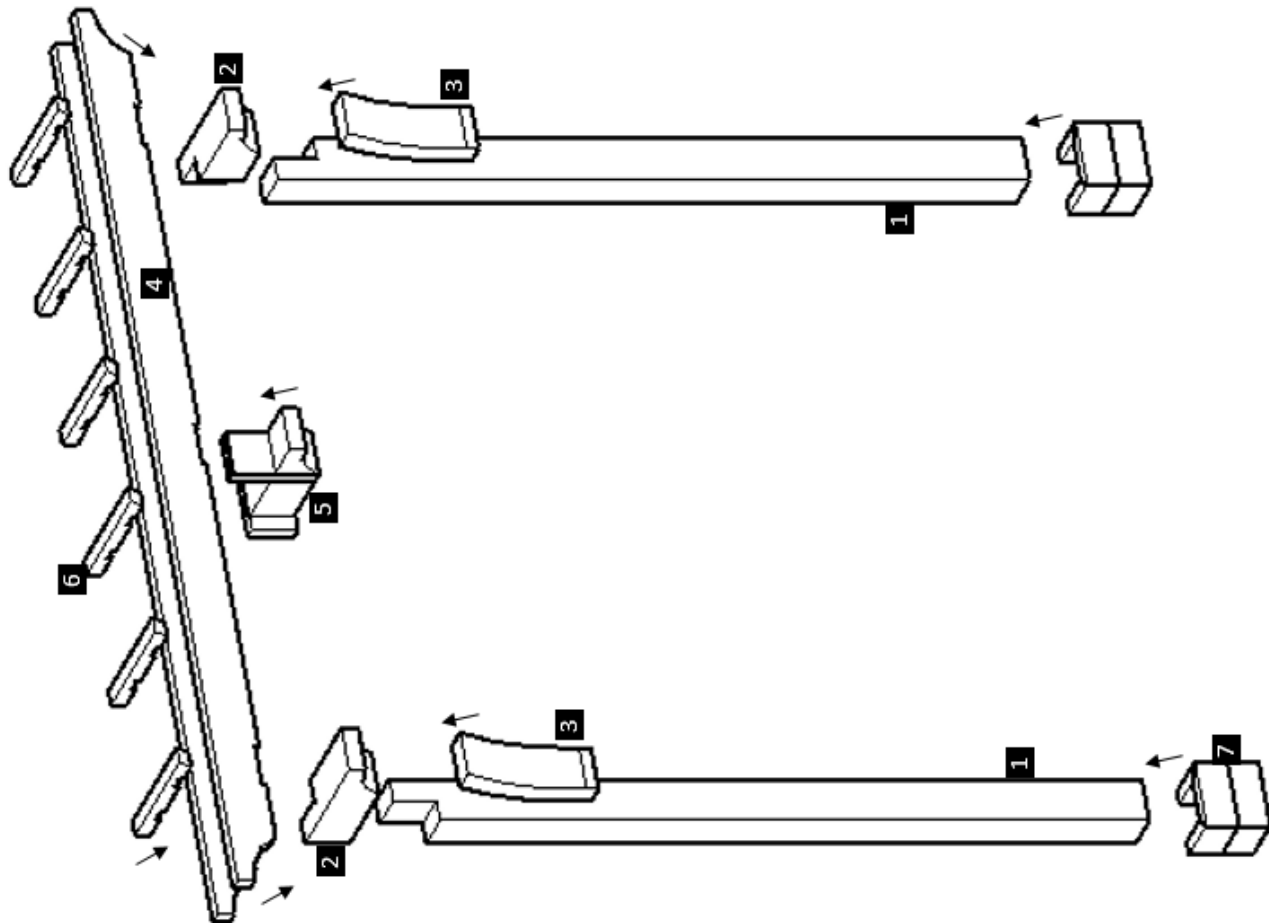


DESCRIPTION	No
Posts	1
Support	2
Brace	3
Rafter	4
Central Supports	5
Slats	6
Boots	7


*Note: Part numbers in the Drawing are for reference only. These do not match to the numbers marked on the parts sent.*

**NOTE:** In order to know where the post needs to be placed, check the numbers on them. If the post is not marked, then place the single Supports on the ground to locate the markings for each post position and clearly set your bearings. (“Don’t attach yet, only place them on the ground to begin with”).


**Step 1:** Placed your posts. Each part has a series of numbers that indicate where to attach the part with the corresponding number.

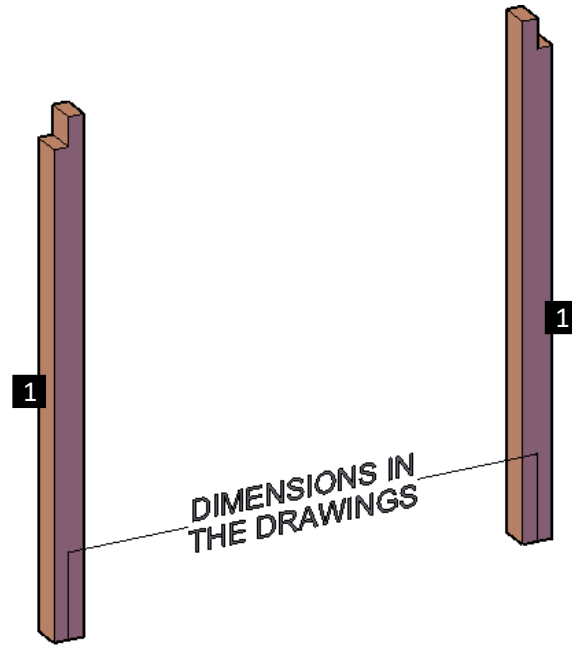


**Step 2:** Attach the supports (2) to the posts with 5/16" X 5 1/2 Bolts (C). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

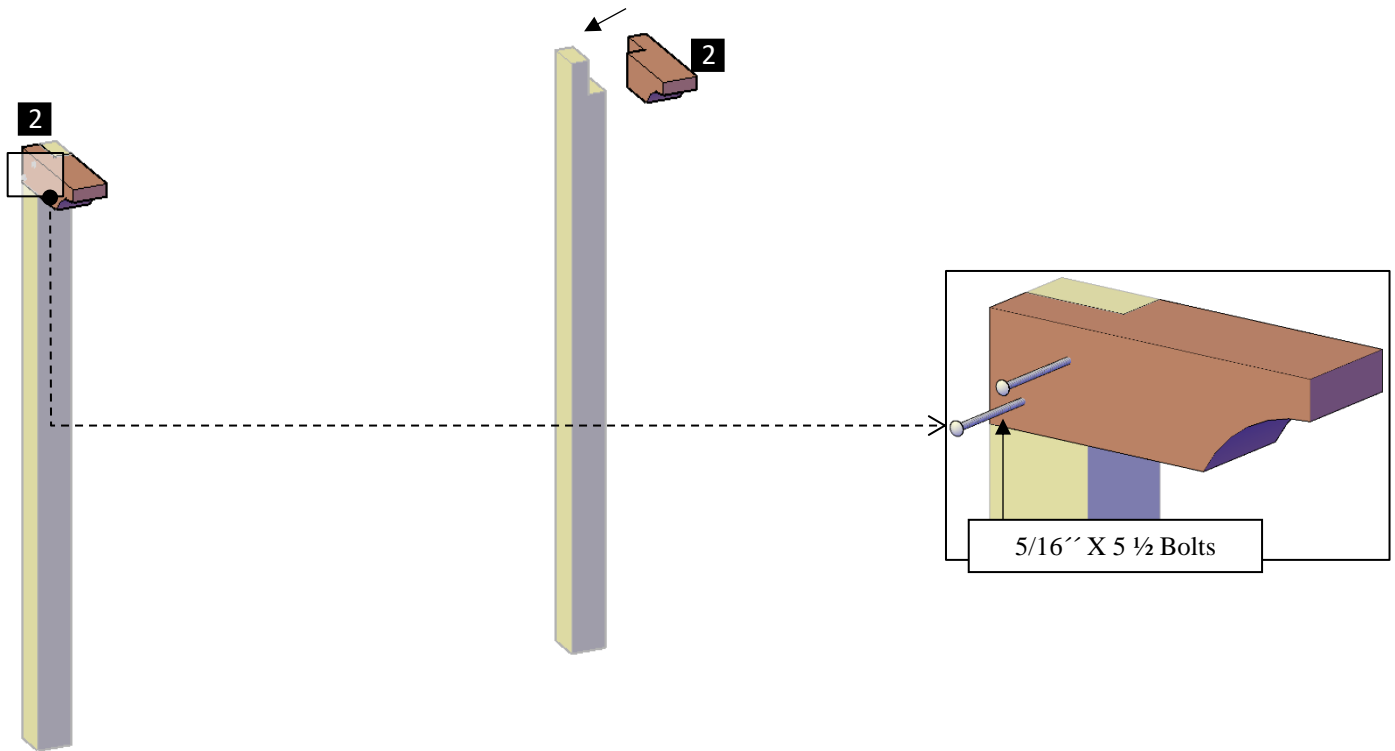


**Step 3:** Attach the braces (3) to the posts with 3/8" X 8" bolts (D). After that, attach the braces (3) to the support with 3/8" X 8" lag bolts (E). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

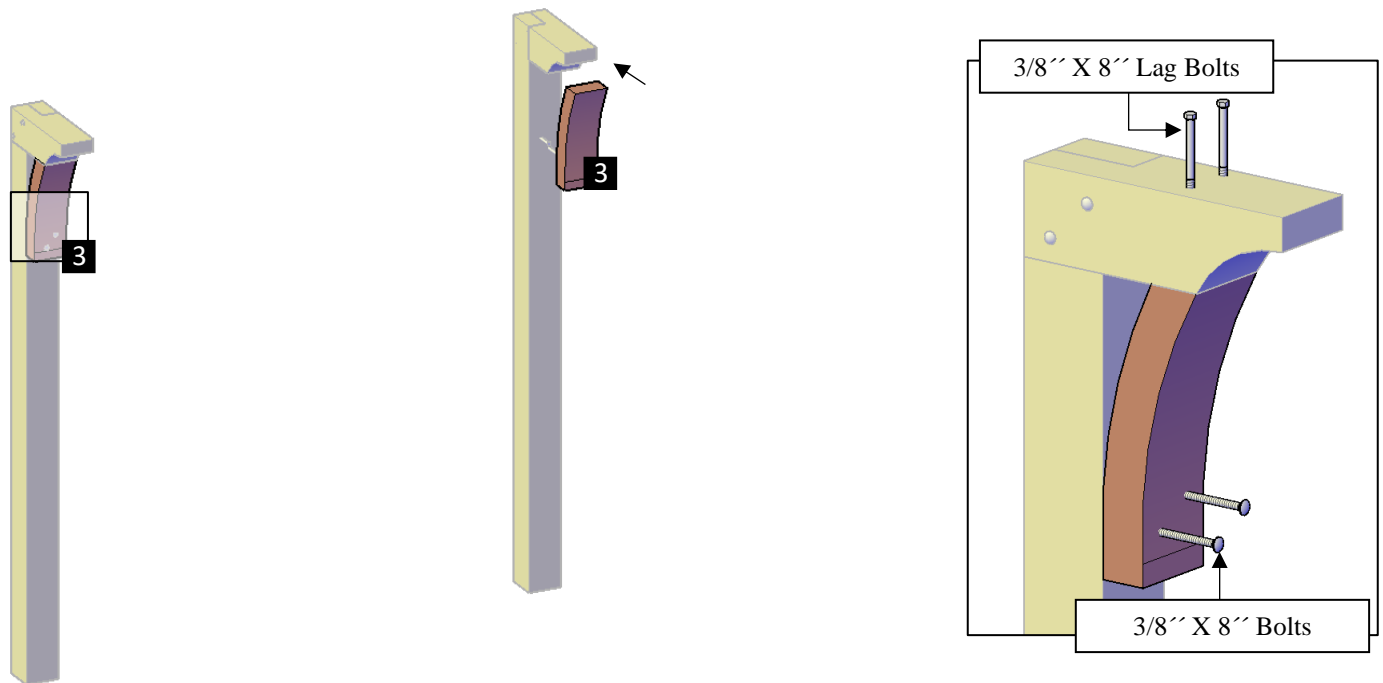


**Step 4:** Attach the rafters (4) to the posts with 3" deck screws (F). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

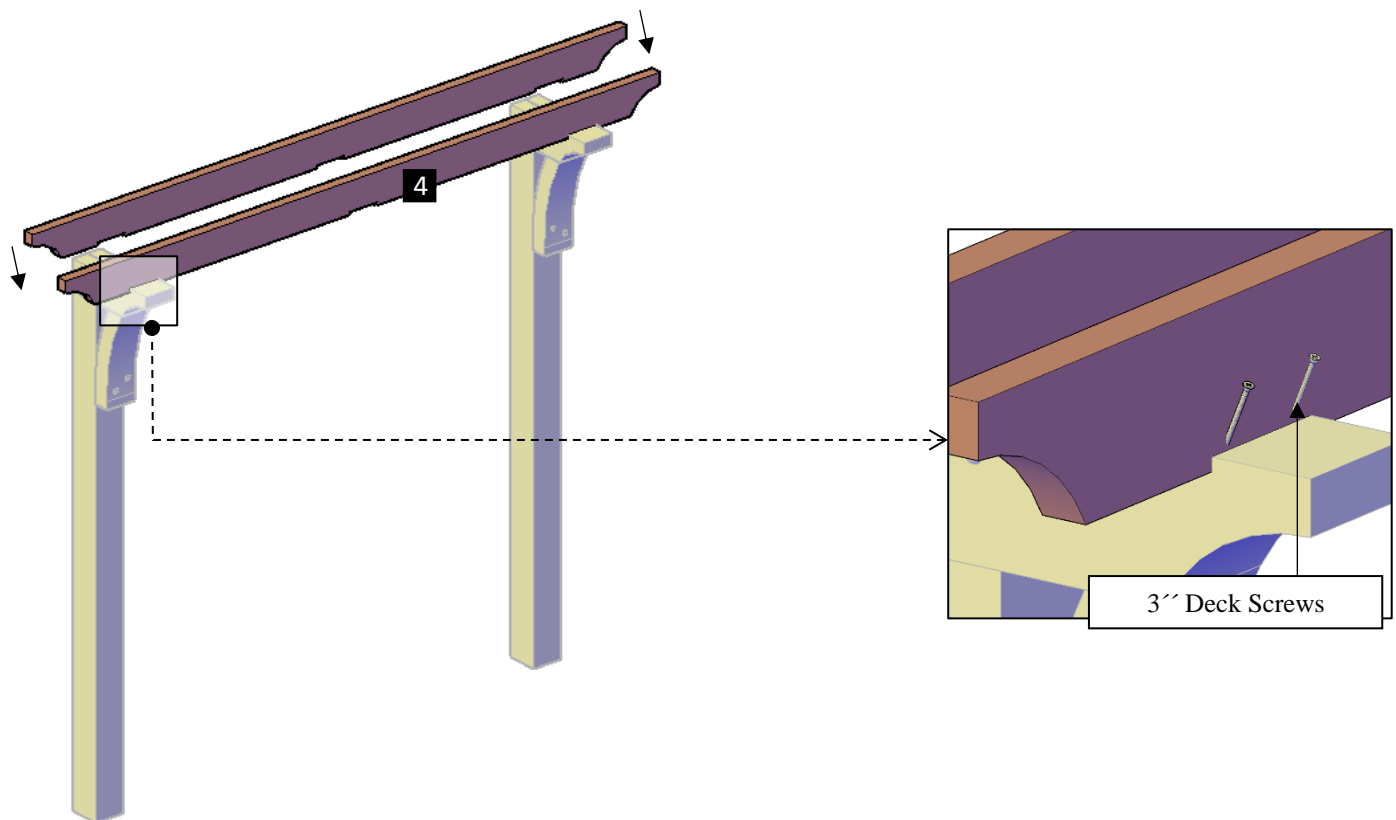



**Step 5:** Attach the central support (5) to the posts with 5/16" X 4" (G). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

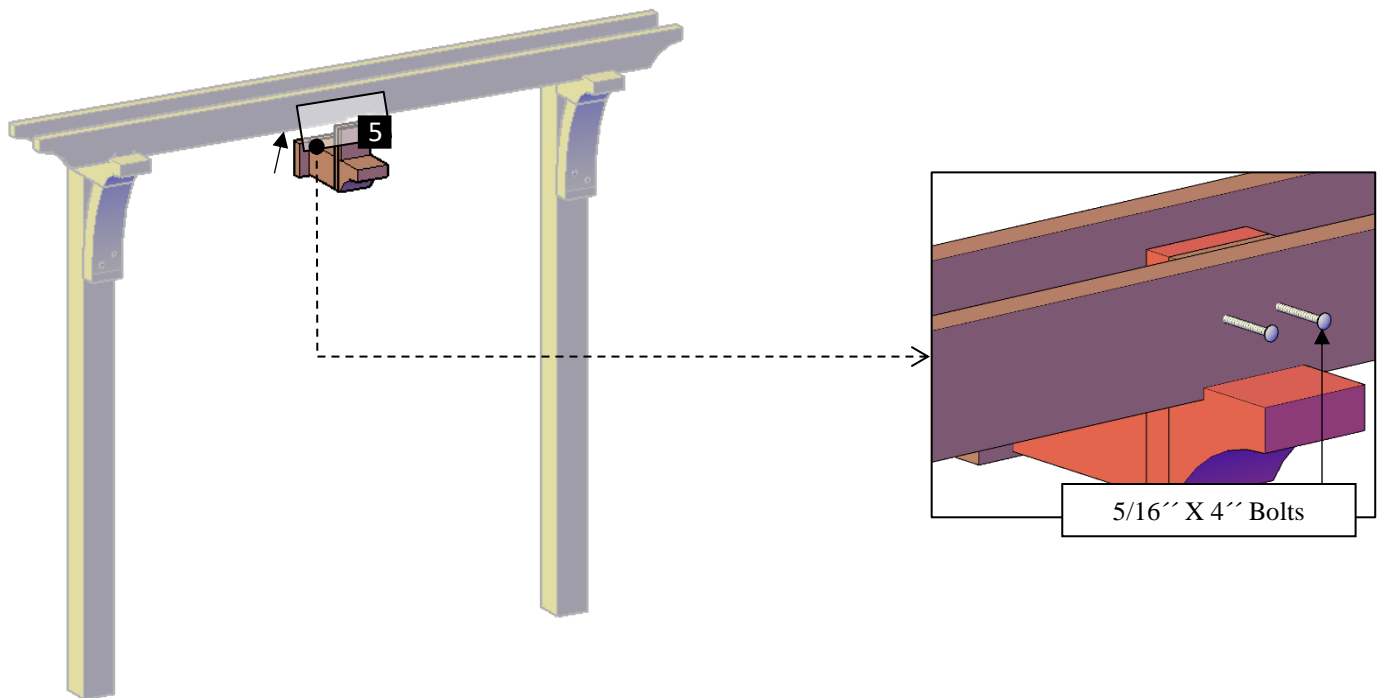


**Step 6:** Attach the slats (6) to the posts with 3" deck screws (F). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

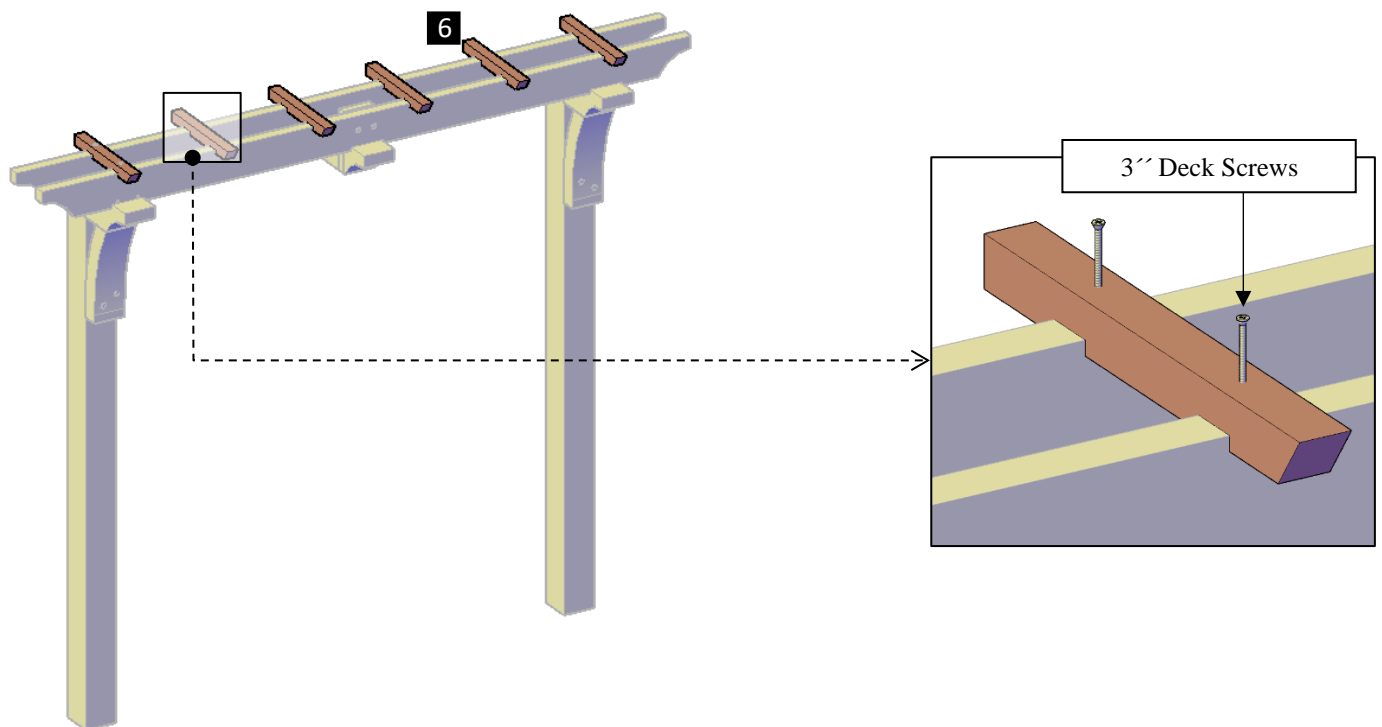

**Step 7:** Attach the boots (6) to the posts with 3" deck screws (F). Each part has a series of numbers that indicate where to attach the part with the corresponding number.

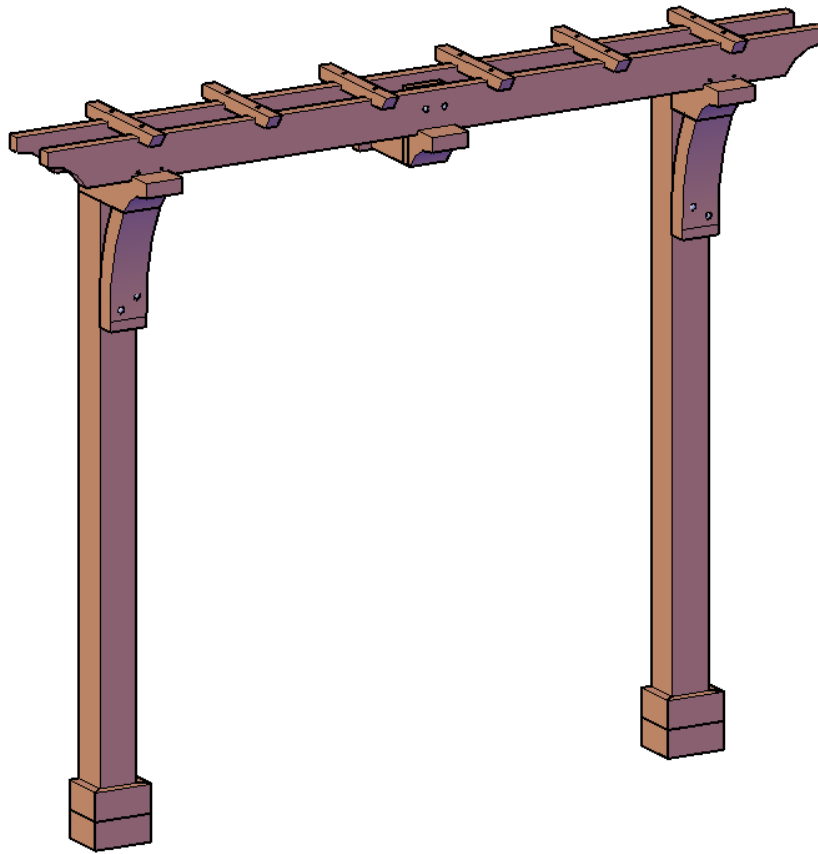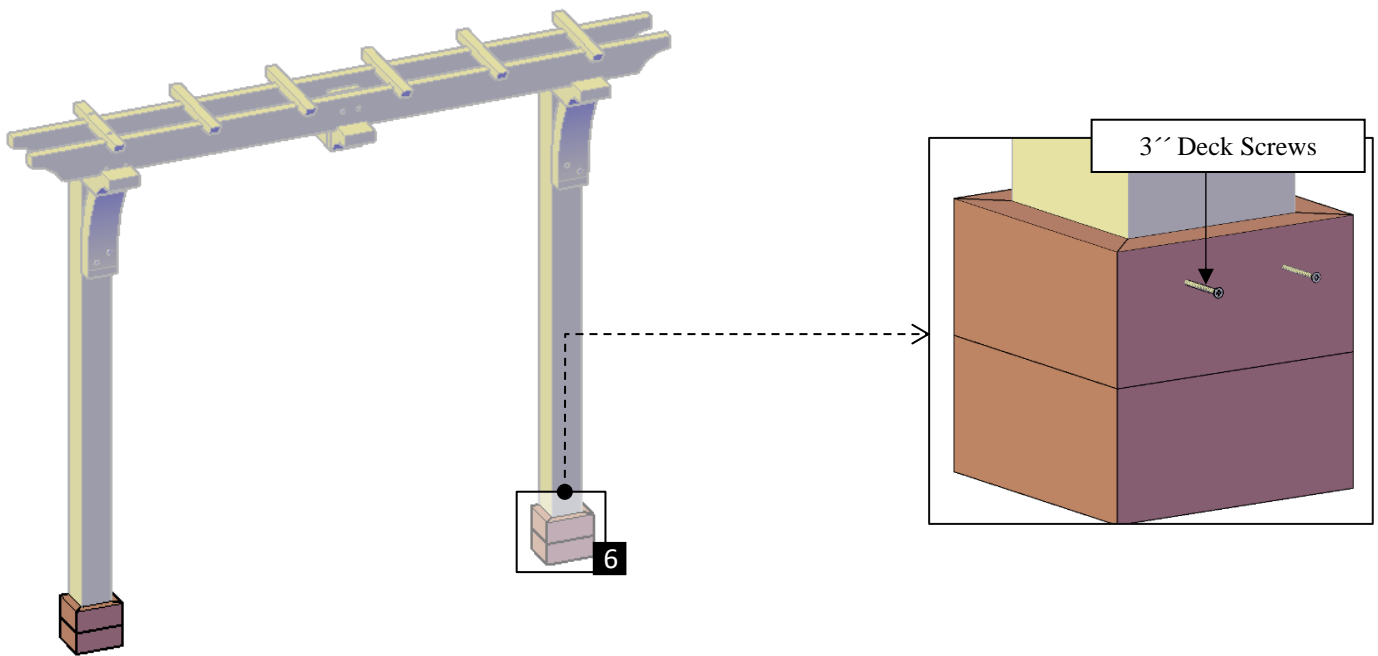



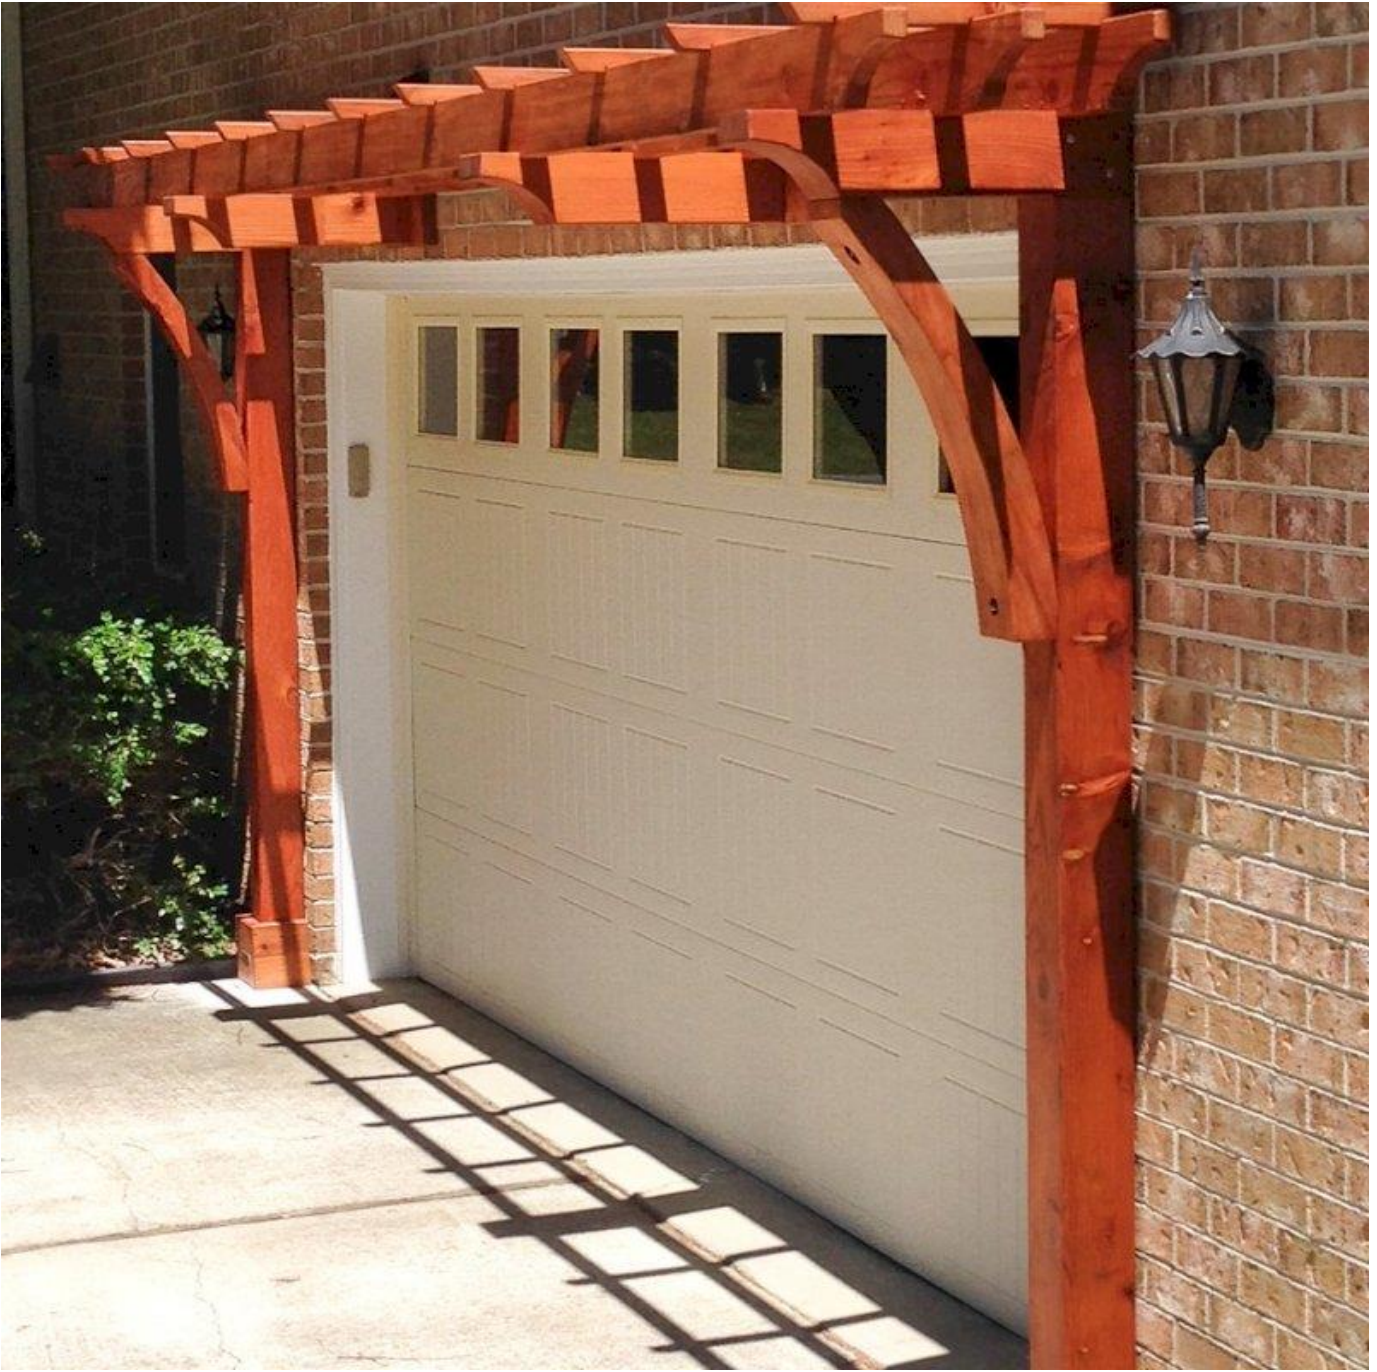

*This completes the Arbor Assembly. Hope you enjoy your set for many decades. If you ever have a problem or a question, don't hesitate to call us (866 332 2403) or email us. We are here to support you.*